

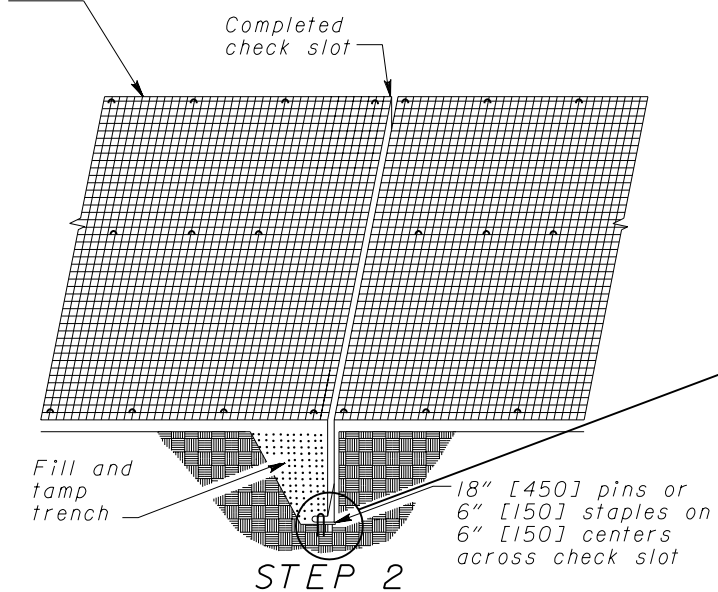
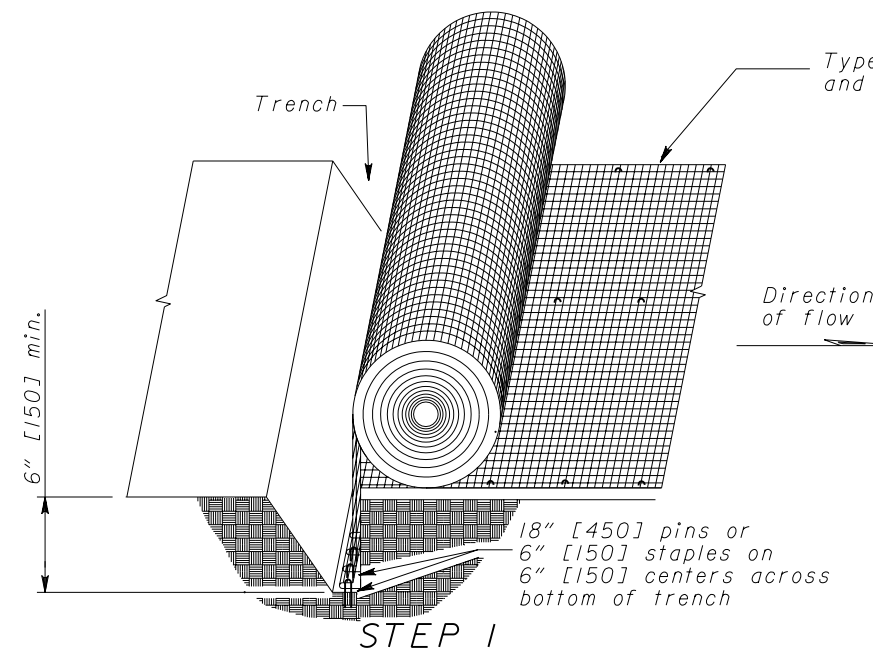



EROSION CONTROL MAT TYPE A-F AND TYPE H-I INSTALLATION

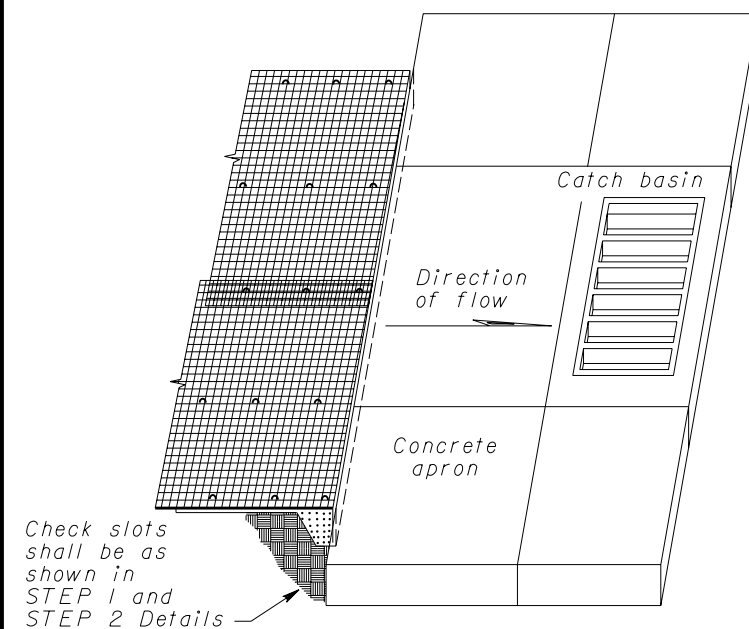

CHECK SLOT AT STRUCTURES

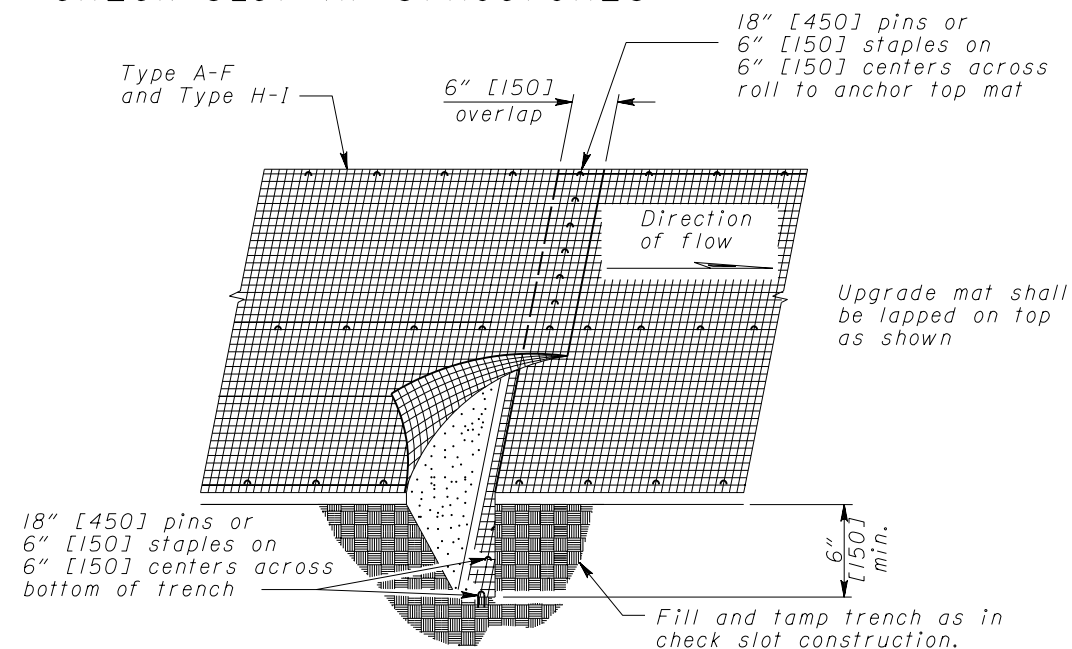


END OF ROLL OVERLAP

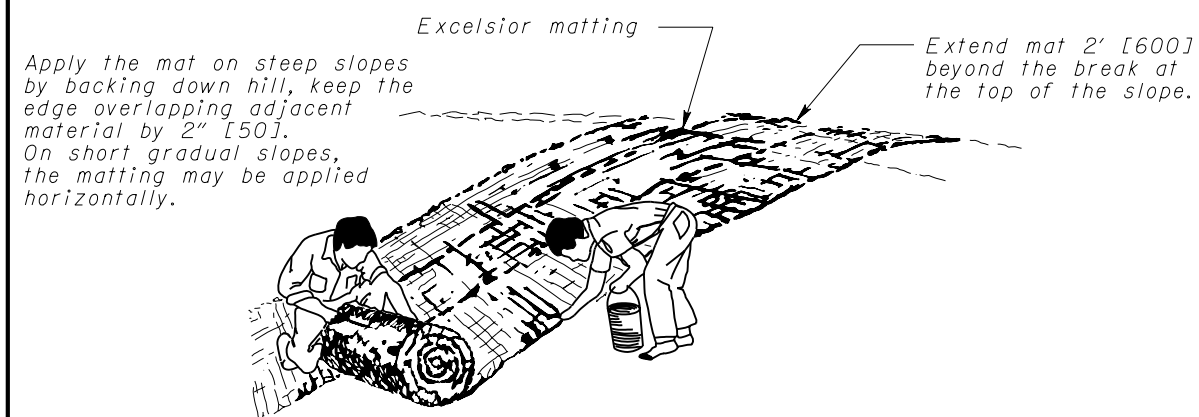


EROSION CONTROL MAT TYPE G INSTALLATION

CHECK SLOT CONSTRUCTION DETAILS

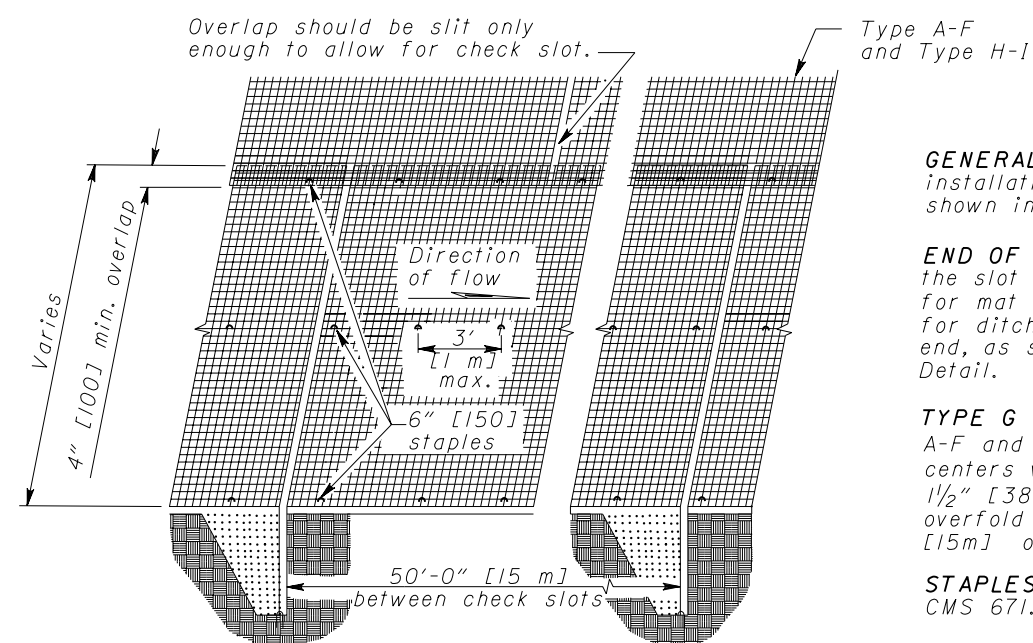

TYPICAL INSTALLATION

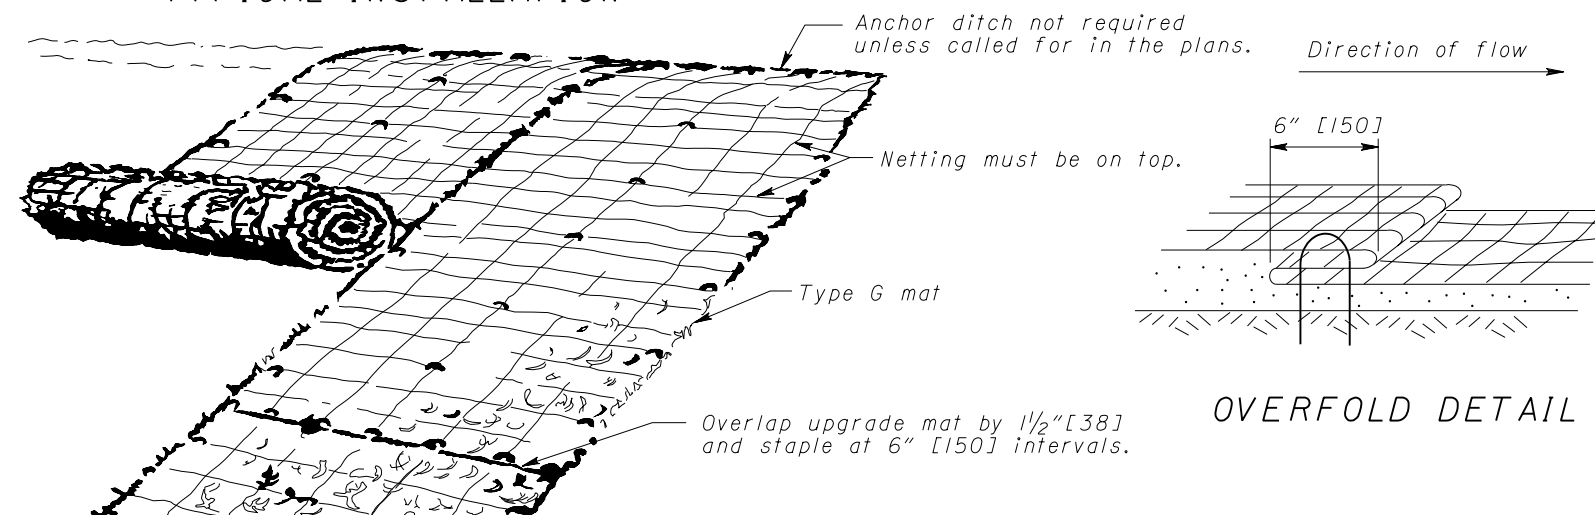

OVERFOLD DETAIL

NOTES

GENERAL: The details shown govern the installation of mat Types A-I unless otherwise shown in the plan.

END OF RUN: Use a check slot and staple or pin in the slot as shown in END OF ROLL OVERLAP Detail for mat Type A - F and H-I. When placing matting for ditch protection, start at the downstream end, as shown in the CHECK SLOT AT STRUCTURES Detail.

TYPE G MAT: Staple or pin mat as detailed for mat Type A-F and H-I except use staples or pins on 6" [150] centers without a buried end at the roll ends and at 1 1/2" [38] end overlaps. Place a 6" [150] overfold across long rolls at intervals of 50' [15m] or less and staple on 6" [150] centers.

STAPLES: Staples and pins shall be in accordance with CMS 671.02.